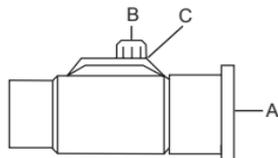
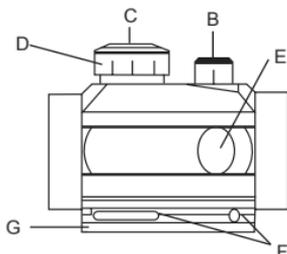


- A. Rubber Eye Guard
- B. Elevation Adjustment Cap
- C. Battery Compartment
- D. Rheostat For Varying Light Intensities
- E. Windage Adjustment Cap
- F. Locking Nut
- G. Integrated Rail

UNIT WITH RING MOUNTS

UNIT WITH INTEGRATED RAIL


* Actual models may vary

CAUTION:

1. BE SURE THAT THE FIREARM IS NOT LOADED. PRACTICE SAFE FIREARM HANDLING PROCEDURES AT ALL TIMES.
2. ALL DISCHARGING OF FIREARMS SHOULD BE DONE AT AN APPROVED RANGE OR EQUALLY SAFE AREA. USE OF EYE AND EAR PROTECTION IS RECOMMENDED.
3. DO NOT ATTEMPT TO VIEW THE SUN DIRECTLY WITH EITHER THIS PRODUCT OR THE NAKED EYE. DIRECT VIEWING OF THE SUN CAN CAUSE PERMANENT EYE DAMAGE

MOUNTING YOUR RED DOT SCOPE
UNITS WITH RING MOUNTS:

As there is no set eye relief for Red-Dot scopes, please allow a minimum of three inches of space between the eyeball and the shooter's eye, when in the shooting position. Separate the rings and place the scope in the rings. Install the rings onto the base or bases by aligning and seating the crossbolt of the ring into the crosscut grooves of the base. Rotate the scope in the rings so that the elevation adjustment is on top and tighten the two screws.

UNITS WITH INTEGRATED RAIL:

Set the rail onto the base or bases. Align and seat the crossbolt of the ring into the crosscut grooves of the base. Tighten each crossbolt lock-nut with a screwdriver or coin.

NOTE: For additional security, add a drop of thread-locking compound to the center of each lock-nut.

INSTALLING BATTERIES

Red-Dot scopes are powered by one CR2032 3V lithium battery. The battery compartment is located on the illumination dial setting knob. To replace/insert battery hold the bottom portion of the dial knob and twist the thin cap counter clockwise, insert battery positive (+) side up. To close hold the dial knob and twist until cap is securely closed. If the reticle dims or does not illuminate at all, replace battery

ILLUMINATED RETICLE

To activate the illumination (IR) turn the rheostat knob clockwise to brighten and counter clockwise to dim. The lower numbers represent dimmer settings and the higher numbers represent brighter settings. The "0" position indicates the unit is OFF.

ZEROING

With the scope mounted, rest the gun on a solid support. Remove the windage and elevation adjustment screw caps from the scope. Sight along the barrel and aim at a target 50 to 100 yards away. Sight through your Red-Dot scope and use the windage and elevation adjustments to align the lighted reticle with the target as seen along the barrel.

NOTE: Each click of adjustment changes bullet strike at a shooting distance of 100 yards by the amount indicated by the following formula: Divide the distance (number of yards) by 100. The resulting number, when multiplied by the click value stated on the windage and elevation dial plates, will yield the actual click value of the scope at the shooting distance.

FORMULA: Distance / 100 = N

N x Stated Click Value = Actual Click Value

ONE YEAR LIMITED WARRANTY**RED DOTS**

BARSKA® Optics, as manufacturer, warrants this new precision optical product to be free of original defects in materials and/or workmanship for the length of time specified by this warranty. This warranty does not include damage caused by abuse, improper handling, installation, maintenance, normal wear-and-tear, unauthorized repairs or modifications and tampering in anyway.

This warranty is limited to the original purchaser and is not transferable. This warranty applies only to products purchased in the United States of America and Canada.

In the event of a defect within 30 days, the consumer must return the defective unit to the BARSKA dealer (the place of purchase) at his/her own expense.

Beyond 30 days, BARSKA products should be sent to the following address for warranty repairs. Products must be packed carefully and sturdily to prevent damage in transit, and returned freight prepaid to:

BARSKA® OPTICS
1721 WRIGHT AVE.
LA VERNE, CA 91750

For additional and updated information please visit our website at www.barska.com

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns.

NOTE: All merchandise received without a valid RMA # will be returned to shipper at his/her own expense.

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of \$15.00 to cover inspection, shipping and handling.

*Please allow 6-8 weeks for delivery.

This product will either be replaced or repaired at the discretion of the warrantor. If it's a discontinued item, we will replace the product with an equivalent product. Should the repair not be covered by this warranty, an estimate will be sent for your approval. Non-warranty repairs or refurbishing of your optical products are always provided at a reasonable cost.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.